

镜头参数 lens specification

焦段: 35mm

Focal length: 35mm

Maximum aperture: F1.4

最小老圈: F16

Minimum aperture: F16

画幅: APS-C

Frame: APS-C

对焦方式:手动

Focus method: manual

卡ロ: E、EOS-M、X、Z、M43、L

Lens mount: E\EOS-M\X\Z\M43\L

滤镜尺寸: 39mm Filter size: 39mm

最近对焦距离: 0.28m

Closest focusing distance: 0.28m

视角: 45度 Angle of view: 45°

宅圈叶片:10片

Diaphragm Blades: 10pcs

芜学结构:6组7片

Optical Design: 7 Elements in 6 Groups

重量: 180g(约)

Weight: around: 180g

把镣头卡口上的圆点对 准相机上的圆点,然后 顺时针转动镣头, 听到 "嗒"的声音代表镜头 巴安装到位 (安装镜头 时请勿按相机上的镣头 释放按钮)。

Align the dots on the lens mount with the dots on the camera, and then turn the lens clockwise. When you hear a "click" sound, it means that the lens is in place (do not press the lens release button on the camera when installing the lens).



卸载镜头 Uninstall the lens

按下相机镜头释放的按钮、然后逆时针转动镜头即可取出。 Press the release button, and then turn the lens counterclockwise to remove it.

EXIT

开

ON

C

按下

非线性

快门 AE 无镜头拍摄

无卡拍摄

对焦环操作

AE/AF-LOCK设定

曝光补偿按钮设置

对焦环

Fujifilm

	E SET UP		
LQ.	USER SETTING		
AF	SOUND SET-UP		
	SCREEN SET-UP		
4	BUTTON/DIAL SETTING		٠
	POWER MANAGEMENT		
) <u>m</u>	SAVE DATA SET-UP		
1	CONNECTION SETTING		
MY			
400		BACKEXIT	
	BUTTON/DIAL SETTING	2/3	
10.	ISO DIAL SETTING (A)	AUTO	
AL.	SHUTTER AF		
0	SHUTTER AE		
6	SHOOT WITHOUT LENS	OFF	•
	SHOOT WITHOUT CARD	ON	
22	FOCUS RING	C	
	AE/AF-LOCK MODE	P	





 
Sony



松下




Panasonic






光学结构图 Optical design

 

MTF

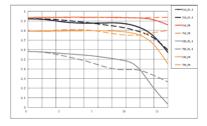



安全提示:

请勿将镜头或相机对着太阳及其他强芜源,以免损伤眼睛。 贮存镜头的环境应避免阳光直射,以免光线汇聚引发火灾。 请勿将镜头放置于儿童易触及的地方,防止不可估量的危险。

Warning:

Do not point the lens or camera directly at the sun or other strong light sources to avoid eye damage.

The storage environment of the lens should be kept away from direct sunlight, so as not to converge and heat to cause a fire.

Do not place the lens in a place where children can reach it to prevent immeasurable danger.

使用小贴士:

请在干燥环境下贮存镜头,避免受潮发霉,以免影响成像。 本产品不具有防水功能,使用过程应避开水源。 镜头清洁时,请先用气吹吹几下镜片表面,再用干净、柔 软镫头布/纸轻轻擦拭。

Tips:

Please store the lens in a dry environment to avoid moisture and mold, which may affect the image quality.

This product does not have a waterproof function, so avoid water sources during use.

When cleaning the lens, please blow the surface of the lens several times with air blower, and then gently wipe with a clean, soft lens cloth/paper.

The Thinking Artisan

以座右铭·匠心永隽